User Manual

GB

cocos MUSIC MP3-Card Dance

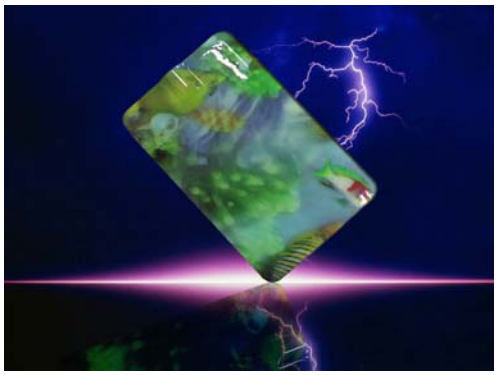

Features

- Exquisite Appearance
  unique appearance and comfortable handling
- Multi-Codec player
  supports MP1, MP2, MP3, WMA, WMV, ASF and WAV formats
- Drive Free U-Disk
  you can manage your files directly through 'Portable Disk' in 'My Computer', for operating systems Windows 2000 or above without a driver

Rechargeable Li-Ion battery

Indicates full battery at 4.1V and the power will become less when using.
Indicates low battery power, the battery should then be recharged.

cocos-promotions gmbh | talheimer straße 32-d | 74223 flein, germany | phone 0049 (0) 7131/649 38-0 | fax 0049 (0) 7131/649 38-19
www.cocos-promotions.de | www.cocos-promotions.com | www.usb-sticks.de

Basic Operation

- **Music**

  Short press ⏮/VOL- to select the previous title.
  Short press ⏭/VOL+ to select the next title.

- **Volume Control**

  Long press ⏮/VOL- to decrease the volume**.**
  Long press ⏭/VOL+ to increase the volume.

- **Turn the player On/Off**

  Press the ***Play–***button to turn the player on/off.

- **Play music**

  Long press the ***Play–***button to start or pause the playback.

Operation of keys

1. ***Play–***button: On / Off / Play / Pause

2. ⏮/VOL-: previous title / decrease volume

3. ⏭/VOL+: next title / increase volume

4. Earphone jack / USB-port

5. REC-button: record / Reset-button

Please note:

Short press: short press the button one time
Long press: press the button 1 to 2 seconds

Music playback

1. Connect the earphones.
2. Long press the ***Play–***button to turn the player on.
3. Select your desired title:
   Press ⏮/VOL- to select a previous title.
   Press ⏭/VOL+ to select a following title.
4. Adjust the volume:
   Long press ⏮/VOL- to decrease the volume.
   Long press ⏭/VOL+ to increase the volume.

USB-Disk

The player supports standard USB-disk function with the operating systems Windows 98SE / ME (a driver has to be installed), Windows 2K and above (no driver has to be installed), Mac OS 10.3 and above, Linux Redhat 8.0 and above.

Trouble Shooting

No Power	Please check, if the battery has been inserted properly. Please check, if the player was turned ON.
No sound is heard (earphones).	Please make sure, that the volume is not set on "0", and make sure that the earphone plug is connected firmly. Please check, if the headphone plug is dirty. Corrupted MP3-files can cause a static noise and the sound can be cut off. Please make sure, that the music-files are not damaged.
Download of music files fails.	Please check, if the USB-cable is maybe damaged, and if it was connected properly. Please make sure, that the driver was installed correctly. Please check, if the player's memory is full.